

BrewStation™


READ BEFORE USE

Thank You for Purchasing a BrewStation!

Making great-tasting coffee with BrewStation is simple, once you know how. Please look inside this helpful user guide for our easy set-up steps. If you have any questions, please call our toll free number before you return it. Remember our friendly associates are ready to help you:

USA: 1-800-851-8900

Mexico: 01-800-71-16-100

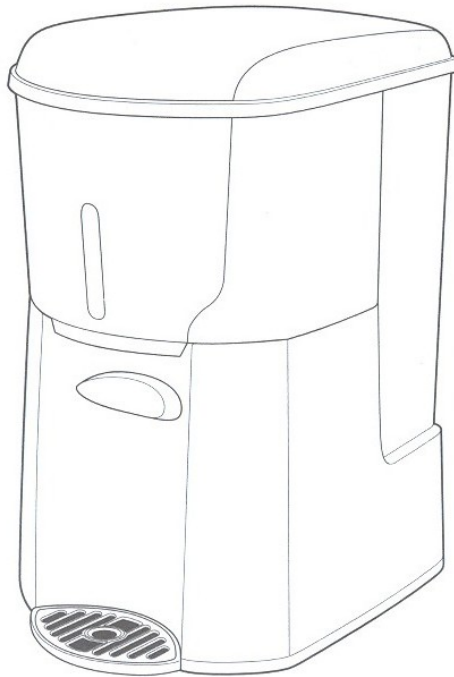

Model 47676

Series A2160BB

BrewStation Safety	2
Parts & Features	4
How to Make Coffee	5
Optional Features	7
Optional Accessories	8
Cleaning Instructions	9
Troubleshooting	12

⚠️ WARNING

Shock Hazard

- Do not immerse this appliance in water or other liquid.
- This appliance has a polarized plug (one wide blade) that reduces the risk of electrical shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.


IMPORTANT!

Never Use Coffee Tank to Pour Hot Coffee or Carry Hot Coffee.



Handle Coffee Tank when it holds only cold water.

Inspect Coffee Tank Seal Before Brewing, to Prevent Hot Coffee Leaks.

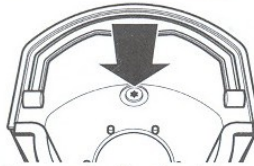

Seal must be flush with bottom of Coffee Tank to form secure seal. Test for leaking dispenser with cold water.

Clean Coffee Tank Monthly, to Prevent Hot Coffee Leaks.



Before brewing, Coffee Tank must be free of grounds and foreign material. To flush, turn it over, press lever and run water for 30 seconds through dispenser.

Additional Information

- If overflow occurs: let unit, coffee and grounds cool completely before attempting any clean-up.
- Use only brand-name, high-quality filters.
- Use only 3/4 tablespoon of ground coffee for each cup of coffee.
- Use coffeemaker cleaner to prevent hard water deposits that affect coffeemaker performance. Clean monthly.
- Do not clean Coffee Tank in dishwasher.
- Read instructions before using.

Call 800.851.8900 (US) or 800.267.2826 (CAN) with questions or to order seals/coffeemaker cleaner.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electric shock, do not place cord, plug or BrewStation in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when either the BrewStation or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. BrewStation must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by Hamilton Beach/Proctor-Silex, Inc. may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. The coffee tank is designed for use with this BrewStation. It must never be used on a range top or in a microwave oven.
12. Do not place BrewStation on or near a hot gas or electric burner or in a heated oven.
13. To disconnect BrewStation, turn controls to OFF, then remove plug from wall outlet.
14. Scalding may occur if the cover is lifted during the brewing cycle.
15. **Warning:** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
16. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

Other Consumer Safety Information

This appliance is intended for household use only.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the BrewStation. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.





To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with your BrewStation.

If the BrewStation overflows during brewing, always allow unit to cool before cleaning unit, coffee and grounds.

Parts and Features

1. Filter Basket
2. Coffee Tank
3. Coffee and Water Level Guides
4. Coffee Tank Filter Screen (see inset)
5. Coffee Dispenser Bar
6. Removable Drip Tray
7. Water Reservoir
8. Keep Warm Plate
9. Water Filter Lid*
10. Water Filter*
11. Water Filter Base*
12. Permanent Coffee Filter*
13. Coffee Scoop
14. Cleancaf™ Cleaner and Descaler

*optional feature
on selected models

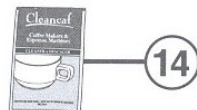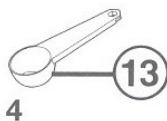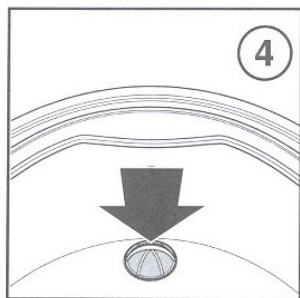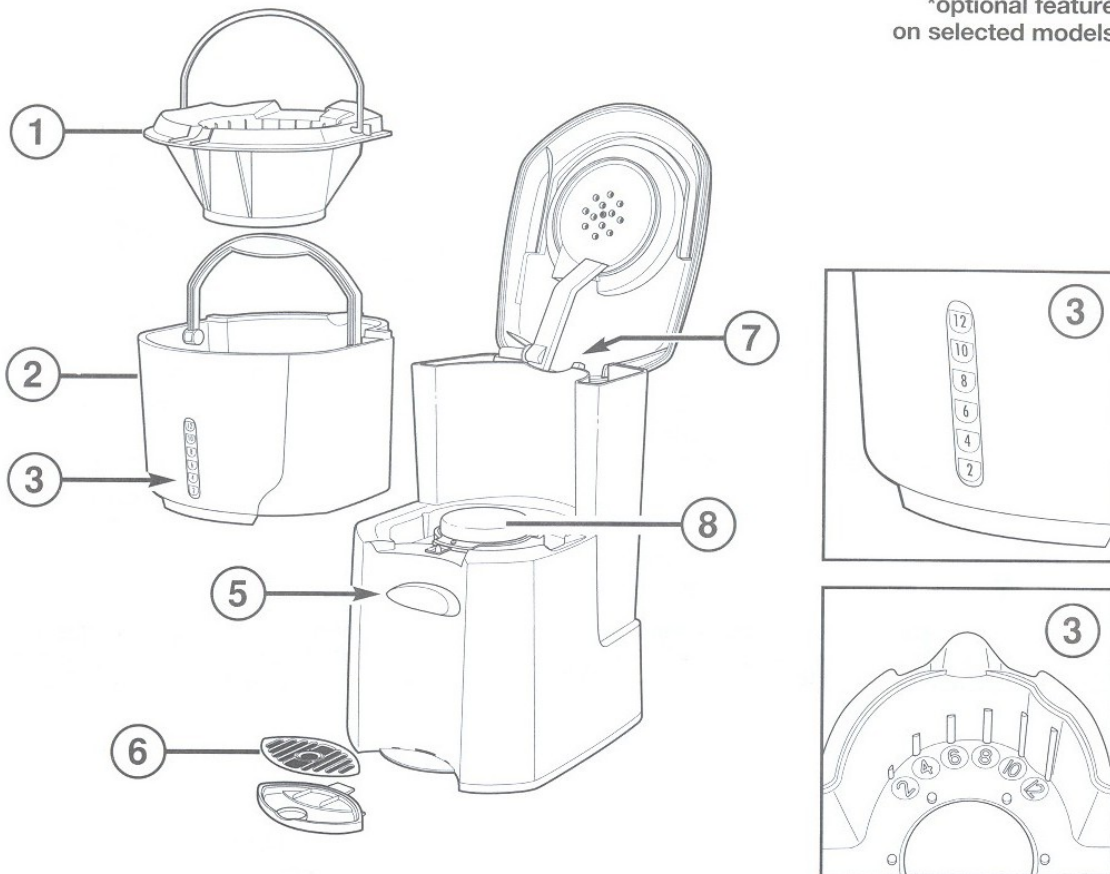

Optional Accessories

9

10

11

12


To Order Call: 1-800-851-8900 (U.S.)
01-800-71-16-100 (Mexico)
hbaccessories.com

How to Make Coffee

1. To ensure best possible taste, before first use, clean the unit by brewing at least one complete cycle using water only (no coffee).



2. For optional features only:

A.) If your model has a water filter, follow steps listed in "Optional Features." A water filter is not required to make coffee in the BrewStation.

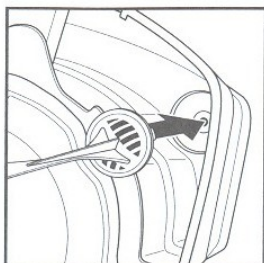


B.) If your model has a clock, set clock before first use by pressing **H** and then **M**. Follow the instructions in Optional Features.


3. Fill coffee tank with desired amount of cold water. Holding coffee tank level, use **Water Level Guide** on coffee tank to ensure correct amount of water. **Do not** exceed the 12 cup level.

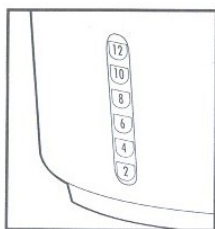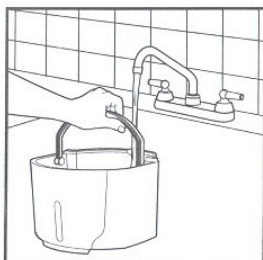


OR

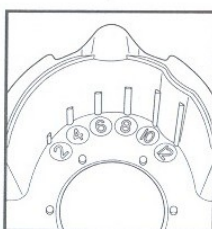


4. Pour water from coffee tank into water reservoir.

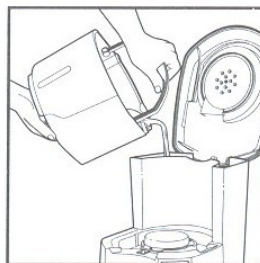


5. Place coffee tank on Keep Warm Plate. Place filter basket on coffee tank.

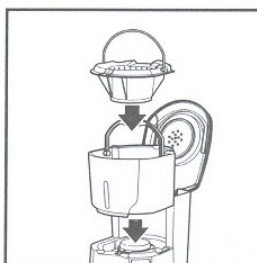

6. Place a disposable paper filter in the filter basket. Use a good quality cupcake (basket) style filter (8 to 12 cup size). A permanent filter may also be used.

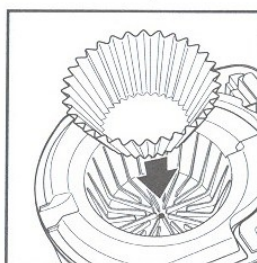

7. For each cup of coffee being made, neatly place 3/4 tablespoon of automatic drip ground coffee into filter basket. **Do not get any grounds inside the coffee tank.**

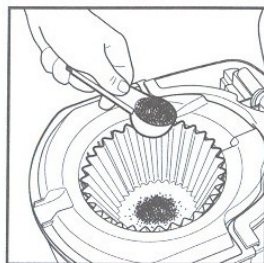

Close lid; make sure it is fully closed.


8. For 6 button models only:

Before brewing, you have the option to select Flavor+, 1-4 Cups, or no selection for normal brewing. If you select Flavor+ or 1-4 Cups, the indicator light will glow. To deselect, press button and indicator light will go out.

continued on next page

How to Make Coffee (cont.)

9. To turn ON, press **ON** button and light will glow.

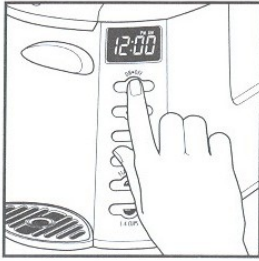

NOTE: Brewing duration will take longer in Flavor+ and 1-4 Cups modes.

NORMAL	TRADITIONAL COFFEE
FLAVOR+	ENHANCED FULL/ STRONG-FLAVORED COFFEE
1-4 CUPS	WHEN BREWING 1-4 CUPS OF COFFEE


10. DO NOT open lid during and just after brewing to preserve the coffee's heat and flavor.




11. To dispense coffee, press dispenser bar with a cup. Remove cup when desired amount has been dispensed. Coffee may be dispensed during and after brewing.



12. The BrewStation features a two hour automatic shut off feature. To turn off sooner, press **ON/OFF** button and indicator light will go out.

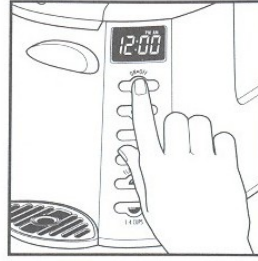

13. When finished, press **ON/OFF** button to turn off, then unplug unit. Do not open coffee-maker until it has been turned off. Always allow to cool before cleaning.

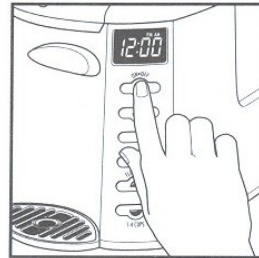

NOTE: Care should be taken when handling the coffee tank after brewing.

! WARNING

Burn Hazard

- Never use coffee tank to pour or carry hot coffee.
- Handle coffee tank only when holding cold water for filling water reservoir and to clean tank after BrewStation has been shut off and the coffee is cool.

! WARNING


Burn Hazard

If BrewStation overflows, allow the unit, coffee and grounds to cool before cleaning the unit, coffee or grounds.

Optional Features


To Set Clock:

1. Plug in BrewStation. Numbers on the clock will flash until you set time of day.
2. To set time of day, press **H** button to set current hour with AM or PM.

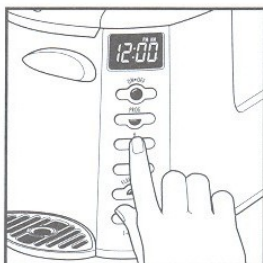


set current hour with AM or PM.

3. Press **M** button until you reach the current time.

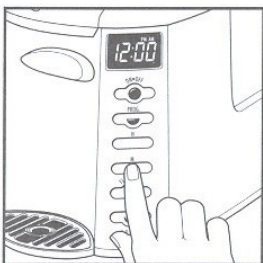

To Program Automatic Brew:

1. Make sure clock is set for correct time of day.
2. Press and hold **PROG** button for

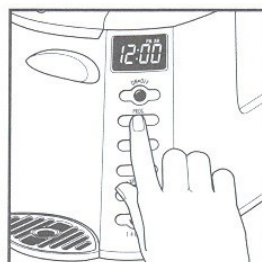


3 seconds or until digits begin to flash.

3. Continue holding **PROG** button and press **H** and then **M** buttons until desired brewing time is reached.
4. Release the **PROG** button. Digits will stop flashing and return to displaying the time of day.
5. Press the **PROG** button momentarily to activate Automatic Brewing. A green light will glow indicating that the coffeemaker is set to make coffee at the desired time.
6. Follow steps 3-13 in How to Make Coffee.
7. Coffeemaker will automatically shut off two hours after brewing.
8. To change automatic brew time, press and hold **PROG** button for 3 seconds or until digits begin to flash. While still holding **PROG** button down, press **H** and **M** buttons until desired brewing time is reached. Release and then press the **PROG** button and a green light will glow.

Optional Accessories

Water Filter

1. Before first use, soak water filter in cold tap water for 15 minutes. Then rinse under cold running tap water for 15 seconds.

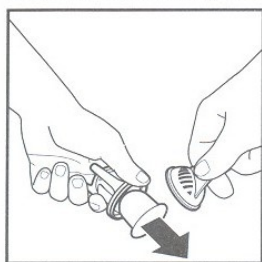

2. Insert filter in base. Snap lid onto base.
3. Place filter and filter holder in reservoir.
4. Replace after 60 brew cycles of coffee. Set your replacement month by aligning the arrow with the month you expect will represent 60 brew cycles.
5. To replace, pull up on lid of filter holder while holding filter base, turn filter base to allow filter to drop out.

Permanent Filter

The Permanent Filter takes the place of disposable paper filters. Simply place the Permanent Filter in the filter basket. Rinse the Permanent Filter in hot water before first use. Clean the Permanent Filter under hot running water and let dry. Permanent Filter can be placed in top rack of automatic dishwasher.

Cleaner and Descaler

Coffeemaker cleaner and descaler prevents hard water deposits that affect the coffeemaker's performance and removes coffee stains. Usage frequency depends on local water quality. Use cleaner at least once a month. BrewStations used in areas with hard water may require weekly cleaning.


To Order Call:
1-800-851-8900 (U.S.)
01-800-71-16-100 (Mexico)
or online:
hbaccessories.com

Cleaning Instructions


To maintain the performance of your BrewStation, **clean once a month**. Cleaning the BrewStation removes mineral deposits that slow down brew time and result in poor coffee taste. BrewStations used in an area with hard water require more frequent cleaning (such as weekly).

To Clean Inside of BrewStation:

1. Remove water filter and water filter holder (optional feature).

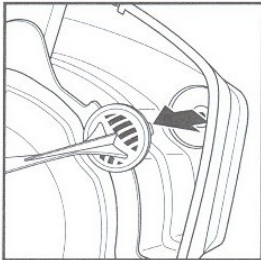

2. Plug in BrewStation and set the clock (on clock model).
3. Place empty coffee tank on Keep Warm Plate. Place filter basket on coffee tank. Do not add coffee into filter basket.

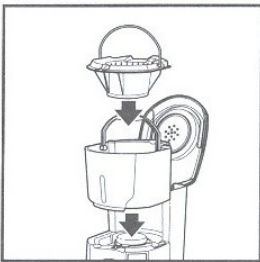

4. Use any commercially-available coffeemaker cleaner and descaler intended for home use. Follow package directions. After using descaler, rinse BrewStation





coffeemaker by brewing twice with water only.

To order a cleaner, call:
1-800-851-8900 (U.S.)
01-800-71-16-100 (Mexico)
or online: hbaccessories.com

NOTE: Commercially-available brands of descaler include CleanCaf™ or white vinegar.

5. To turn ON, press **ON** button and light will glow. After 20 seconds turn OFF.

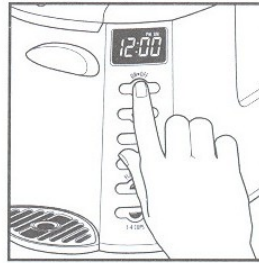


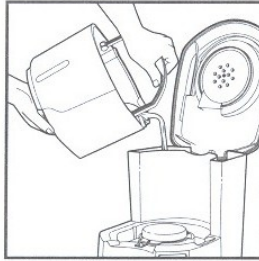6. Wait 20 minutes to allow the descaler to clean. Then turn ON again. When the brew cycle is finished, turn OFF. Wait for BrewStation and water in coffee tank to cool, then empty coffee tank and rinse.
 7. Pour one coffee tank of cold tap water into the reservoir. Place coffee tank on Keep Warm Plate.
- 
8. To turn ON, press **ON/OFF** button. When the brew cycle is finished, empty coffee tank. Allow unit and water in coffee tank to cool, then repeat this process with two or more coffee tanks of cold water.
 9. Turn OFF when complete.
 10. Wash coffee tank and brew basket. Your BrewStation is now ready to brew coffee.


*continued on
next page*

Cleaning Instructions *(cont.)*

To Clean Coffee Tank Filter:

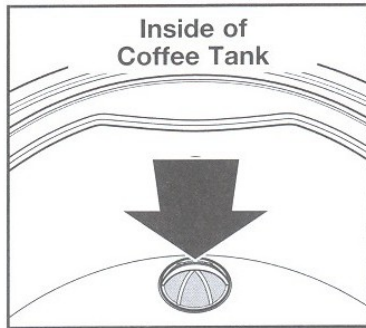

1. Lift up on filter to remove it from coffee tank. Rinse filter under stream of water to flush filter clean.

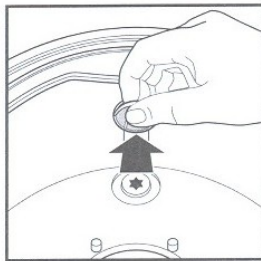

2. The filter snaps back into position over the seal in coffee tank.


To order replacement filters:

1-800-851-8900 (U.S.)

01-800-71-16-100 (Mexico)

or online: hbaccessories.com

To Clean Coffee Grounds or Foreign Matter from Coffee Tank:

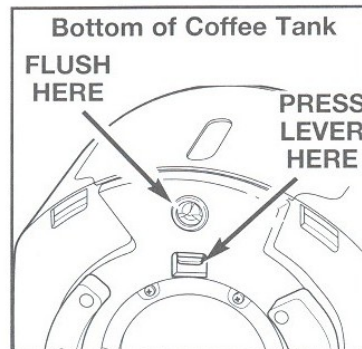

Over the sink, turn the coffee tank upside-down then press lever and flush with water for 30 seconds to remove coffee grounds.

To test for drips or leaks from dispenser, fill coffee tank with water and hold coffee tank over sink. If dispenser drips or leaks, reflush dispenser to remove coffee grounds.

To Clean Coffee Tank, Drip Tray and Filter Basket:

Coffee tank, drip tray, and filter basket should be washed in hot, soapy water. Drip tray and filter basket may be washed on the top rack of the dishwasher. **Do not clean coffee tank in dishwasher.**

To Remove Coffee Stains from Coffee Tank:

Follow the directions on any commercially-available coffeemaker cleaner and descaler intended for home use.

Cleaning Instructions *(cont.)*


Early Detection Warning System

Over time mineral deposits from water will build up in your coffeemaker which can slow down brewing or even stop the unit from brewing at all. When coffeemaker brewing time becomes longer, you can over-extract coffee which results in a bitter taste.

BrewStation features an early detection warning system. When significant mineral buildup occurs, you will be notified:


NON-CLOCK MODELS

ON/OFF light will blink in one second intervals.

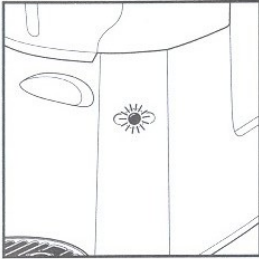

CLOCK MODELS:

Clock digits will flash intermittently.

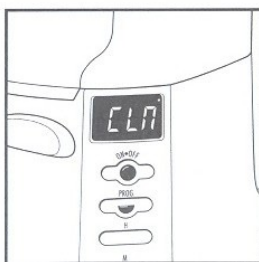

“CLN” will appear in place of the clock digits for 5 seconds, then return to normal clock digits for 10 seconds. This will continue until you have cleaned the coffeemaker according to the directions on page 8.

When you see this warning, complete the brew cycle and enjoy your coffee. Before making another pot, we strongly recommend that you clean your coffeemaker by following “To Clean the Inside of BrewStation” instructions on page 8. If you do not have coffeemaker cleaner or white vinegar, you can obtain it at your local food store or you can order a cleaner:

1-800-851-8900 (U.S.)

01-800-71-16-100 (Mexico)

or online: hbaccessories.com

Coffeemaker will reset to normal mode once turned off or unplugged. It is likely the warning will appear again during brewing if you have not yet cleaned your coffeemaker.

To keep your coffeemaker working properly and to enjoy the great taste you expect every time, please be sure to clean your coffeemaker at least once a month and always clean the coffeemaker before brewing another pot when you receive the early detection warning.

Questions?

You can call us toll free at:

1-800-851-8900 in US • 01-800-71-16-100 in Mexico

Troubleshooting

POTENTIAL PROBLEM	PROBABLE CAUSE
Leaks from dispenser.	<ul style="list-style-type: none"> Coffee grounds trapped in coffee tank dispensing mechanism under seal in coffee tank. See "To Clean Coffee Grounds or Foreign Matter from Coffee Tank" on page 10.
ON/OFF Light blinking or "CLN" appears on clock.	<ul style="list-style-type: none"> Mineral deposits have built up. See page 11 for more information about the Early Detection Warning System.
Coffee tastes bad.	<ul style="list-style-type: none"> Coffeemaker needs cleaning. See page 9. Coffee ground other than automatic drip. See page 5. Coffee-to-water ratio unbalanced. See page 5. Adjust for personal preference. Poor water quality (use filtered or bottled water to make coffee).
Coffee not brewing/ coffee stops brewing/ unit will not turn on.	<ul style="list-style-type: none"> Mineral deposits have built up. Clean the coffeemaker following Cleaning Instructions. See page 9. Water reservoir is empty. Unit is unplugged. Power outage. Power surge. Unplug then plug the unit back in.
Coffee brews slowly/ coffee overflows basket.	<ul style="list-style-type: none"> Coffeemaker needs cleaning. Clean the coffeemaker at least every 30 days to maintain proper performance. Excessive amounts of coffee. Coffee ground too finely (not automatic drip grind). More than one paper filter in basket. Poor quality paper filter. Wrong size paper filter.

Questions?

You can call us toll free at:

1-800-851-8900 in US

01-800-71-16-100 in Mexico

Customer Service

If you have a question about your BrewStation, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your BrewStation. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

This warranty applies to products purchased in the U.S. or Canada.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of one (1) year for Hamilton Beach products or one hundred eighty (180) days for Proctor-Silex and Traditions products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product, including without limitation: glass parts, glass containers, cutter/strainers, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect including failure to clean product regularly in accordance with manufacturer's instructions, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Mexico 01-800-71-16-100

hamiltonbeach.com or proctorsilex.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.

263 Yadkin Road, Southern Pines, NC 28387

840144300

hamiltonbeach.com

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

3/06

BrewStation™ Quick Start Guide

For more detailed instructions, including how to clean your BrewStation and how to use the optional water filter, refer to the enclosed Use & Care Guide.

Thank You for Purchasing a BrewStation!

Making great-tasting coffee with BrewStation is simple, once you know how. We hope this Quick Start Guide will give you the information you need to begin enjoying your BrewStation right away.

Questions?

Call us first – our friendly associates are ready to help you.

Please don't return your product to the store.


USA 1-800-851-8900

Canada 1-800-267-2826


How To Set Clock and Program Automatic Brewing (clock models only)

1. Set Clock for Time of Day
 - Plug in coffeemaker. To set the time of day, press **H** (hours) and then **M** (minutes). AM or PM are indicated above the digits.
2. Automatic Brewing
 - Press and hold **PROG** button for 3 seconds. Digits will flash.
 - Continue holding **PROG** button, press **H** and **M** until the desired brewing start time is reached.
 - Release the **PROG** button. The clock will return to displaying the time of day.
 - Press **PROG** button momentarily to activate Automatic brewing. A green light will glow.


How To Make Coffee

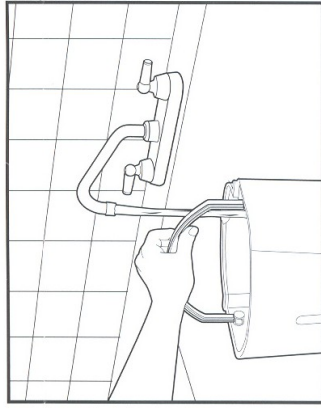


1. Fill coffee tank with cold water. Do not exceed 12-Cup water level.

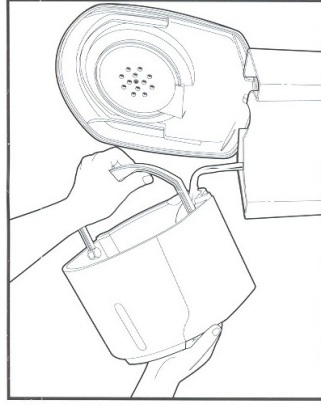


2. Pour water from coffee tank into water reservoir.

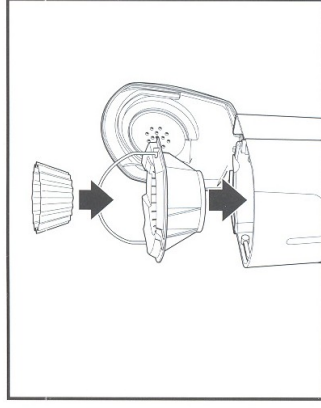


3. Assemble BrewStation. Fill the paper filter basket with coffee, being careful not to get any grounds into the coffee tank.

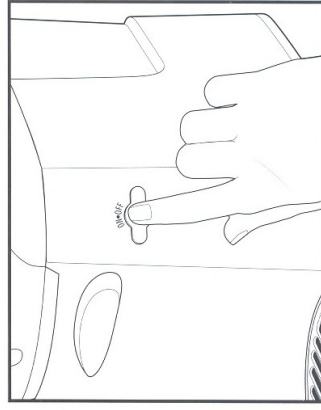

4. Non-Clock Model: Press ON/OFF button and the light will glow.

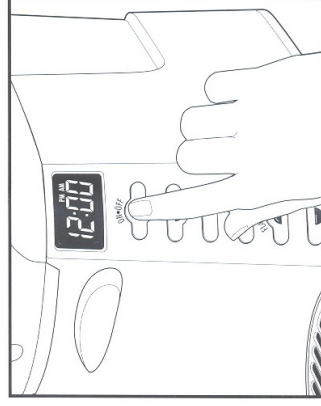

Clock Model: Press ON/OFF button and the light will glow.

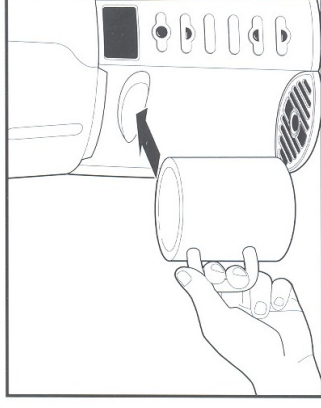

5. Dispense with cup to desired level.